

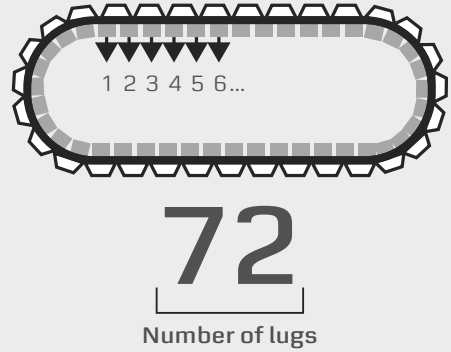
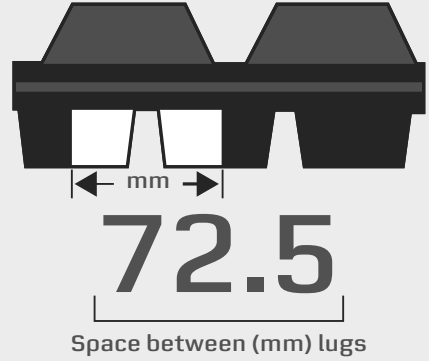
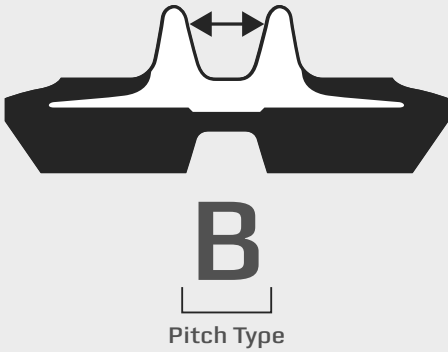


HOW TO MEASURE RUBBER TRACKS

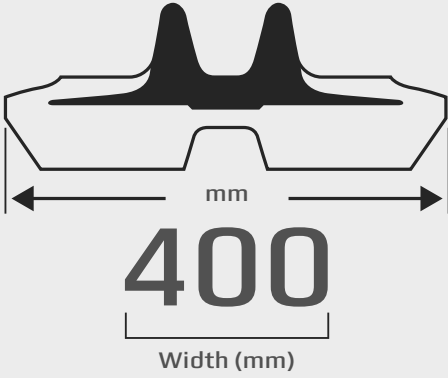

400 x 72.5B x 72

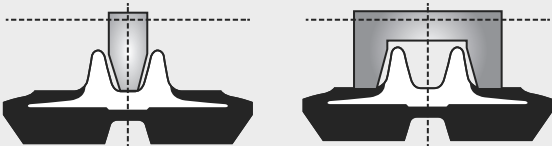

Conventional rollers:

Conventional rollers can only be used on under carriages designed specifically for rubber tracks. Conventional rollers have a pitch measured from the centre of one link to the centre of the next link.



Interchangeable rollers:

Interchangeable rollers can be used on under carriages designed for both rubber and steel tracks. Interchangeable roller tracks are available in long pitch or short pitch design.